


NINE

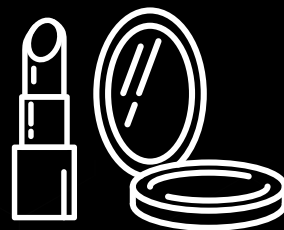

Simple, Elegant, RED HOT.

Jazz up your look with this minimalist lipstick based on seven ingredients. Basic red never looked so good.

- › **Syntadex Sano 7** is an odorless and tasteless petroleum jelly with a supple and creamy texture. It improves make-up resistance and prevents sweating.
- › **Primol 352** is a very high purity, tasteless and odorless mineral oil that has excellent skin compatibility.
- › **Dow Corning® 9576 Smooth Away Elastomer** brings a really smooth and soft texture as well as incredible comfort and mattifying effect.
- › **Dow Corning® FZ-3196** is a moderate volatility silicone, which allows a good spreadability upon application on lips and improves the pigment dispersion.
- › **30-SA-4579 Pigment Red 5 Paste** is a ready-to-use pigment dispersion in mineral oil with an intense red color. Thanks to Univar Colour expertise, there are a number of alternative carriers and colors to create bespoke blends.

personalcareEMEA@univar.com | www.univar-personal-care.com

 **UNIVAR®**
PERSONAL CARE

Trade name	INCI name	Function	Supplier	%
Phase A				
Candelilla Blanchie	<i>Candelilla cera</i>	Wax	Baerlocher / Univar*	12.0
Dow Corning® AMS-C30 Cosmetic Wax	C30-45 Alkyl Methicone and C30-45 Olefin	Wax, structuring agent	Dow / Univar*	6.0
Syntadex Sano 7	<i>Cera microcristallina, Paraffinum liquidum</i>	Refatting agent, make-up resistance	Aiglon Group / Univar*	18.0
Primol 352	<i>Paraffinum liquidum</i>	Emollient	ExxonMobil / Univar*	27.0
Dow Corning® FZ-3196	Caprylyl Methicone	Pigment dispersion, spreadability	Dow / Univar*	10.0
Dow Corning® 9576 Smooth Away Elastomer	Dimethicone (and) Dimethicone/Vinyl Dimethicone Crosspolymer (and) Dimethicone Crosspolymer (and) Beeswax (and) Silica (and) Silica Silylate	Sensory enhancer, mattifying effect	Dow / Univar*	15.0
30-SA-4579 Pigment Red 5 Paste	CI 12490, Mineral Oil	Pigments	Univar Colour*	12.0

Procedure (Hot process)

1. Weigh ingredients of phase A. Mix it and heat it to 75°C until homogenous
2. At 68°C, pour it into lipstick moulds that were previously preheated to 50°C and let them set at 4°C during 15 minutes

Stability

Stable at least 2 months at 4°C, RT and 40°C (still ongoing).

Comments

- Application: Generously apply on your lips, then smile.
- Red stick

Campaign: SEVEN | Reference: BE3617 17 | Issued by: Univar's EMEA PC Laboratory in Brussels, Belgium

* Please contact your regional Univar sales representative to ensure that mentioned products are distributed in your country.

Disclaimer – Univar BV and its affiliates ("Univar") offers this suggested formulation as a representative formulation only. It is not a commercialized product. Univar relies on information and data from its suppliers on which to base this suggested formulation, but Univar has not subjected the suggested formulation to any testing for performance, efficacy or safety. Univar makes no warranties, express or implied, related to this suggested formulation. 00009650-2017